

OPTIMASS 6000 Handbook

Sensor for mass flow

The documentation is only complete when used in combination with the relevant documentation for the signal converter.





All rights reserved. It is prohibited to reproduce this documentation, or any part thereof, without the prior written authorisation of KROHNE Messtechnik GmbH.

Subject to change without notice.

Copyright 2016 by

KROHNE Messtechnik GmbH - Ludwig-Krohne-Str. 5 - 47058 Duisburg (Germany)

i Safety instr	uctions	5
	ded use	
1.2 CE ce	rtification	5
1.3 Assoc	iated documents	5
1.4 Insula	ation case	6
1.5 Press	ure Equipment Directive (PED)	6
	gas	
	, instructions from the manufacturer	
,	opyright and data protection	
	isclaimer	
	roduct liability and warranty	
	formation concerning the documentation	
	arnings and symbols used	
	instructions for the operator	
2 Device desc	crintion	10
2.1 Scope	of delivery	10
	eters with hygienic connections	
	plates	
	Seal	
	erature differential and thermal shock	
	ional safety (SIL capable converter)	
Z.J T UTICE	ional safety (SIL capable converter)	14
3 Installation		15
2.4.0		4.5
	al notes on installation	
	ge	
	ing	
	lation conditions	
	upporting the meter	
	ounting the meter	
	as / liquid build up	
	ide mounting	
	ross talk	
	lange connectionsaximum pipework forces (end loadings)	
	ipework reducersipework rorces (end toadings)	
	lexible connections	
	Hygienic installations	
	Heating and insulation	
	Purge ports	
	Burst discs	
	Zero calibration	
	Sunshades	

CONTENTS OPTIMASS 6000

4	Electrical connections	26
	4.1 Safety instructions	
5	Service	27
	5.1 Spare parts availability	27 27 27
6	Technical data	29
	6.1 Measuring principle (twin tube) 6.2 Technical data 6.3 Measuring accuracy 6.4 Guidelines for maximum operating pressure 6.5 Dimensions and weights 6.5.1 Flanged versions 6.5.2 NAMUR dimensions 6.5.3 Hygienic versions 6.5.4 Heating jacket version 6.5.5 Purge port option 6.5.6 Burst discs 6.5.7 Burst disc option	
7	Notes	62

1.1 Intended use

This mass flowmeter is designed for the direct measurement of mass flow rate, product density and product temperature. Indirectly, it also enables the measurement of parameters like total mass, concentration of dissolved substances and the volume flow. For use in hazardous areas, special codes and regulations are also applicable and these are specified in a separate documentation.



CAUTION!

Responsibility for the use of the measuring devices with regard to suitability, intended use and corrosion resistance of the used materials against the measured fluid lies solely with the operator.



INFORMATION!

This device is a Group 1, Class A device as specified within CISPR11:2009. It is intended for use in industrial environment. There may be potential difficulties in ensuring electromagnetic compatibility in other environments, due to conducted as well as radiated disturbances.



INFORMATION!

The manufacturer is not liable for any damage resulting from improper use or use for other than the intended purpose.

1.2 CE certification



This device conforms with the most recent and up to date versions of the following:

- EMC Directive
- ATEX Directive
- Low Voltage Directive
- Pressure Equipment Directive

The manufacturer declares conformity and the device carries the CE mark.

1.3 Associated documents

This handbook should be read in conjunction with relevant documents in relation to:

- hazardous areas
- communications
- concentration
- corrosion

1.4 Insulation case

On meters fitted with an insulation case, the case will be filled with one of the following materials:

Cryogenic meters (-200°C...+40°C / -364°F...+104°F)

Block grade EPS 1112A (Polystyrene) containing flame retardant additive (FRA)

Standard meters (-70°C...+230°C / -94°F...+446°F)

Glass mineral wool

High temperature meters (-50°C...+400°C / -58°F...+752°F)

Silicon dioxide based mineral wool

Do not open the insulation case. Some, or all, of the above materials can cause:

- skin irritation
- · throat and lung irritation
- · eye irritation


Install the meter so that water cannot get into the insulation case. Water will damage the insulation material and reduce performance.

1.5 Pressure Equipment Directive (PED)



LEGAL NOTICE!

The Pressure Equipment Directive places legal requirements on both the manufacturer and the end user. Please read this section carefully!

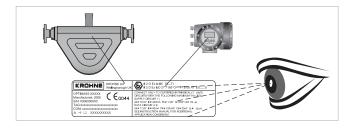

To ensure the PED integrity of the meter, you MUST check that the serial numbers on the converter nameplate and the sensor nameplate are the same.

To comply with the requirements of the Pressure Equipment Directive (PED) the manufacturer provides all the relevant technical data in the technical data section of this handbook. Secondary pressure containment is NOT supplied on this meter.

Tube failure

Where the meter is being used to measure high pressure gasses and / or gasses kept as liquids by high pressure and / or where there is a risk of tube failure because of the use of corrosive or erosive fluids, frequent pressure and / or thermal cycling, seismic or other shock loading, the burst disc option MUST be purchased. For more information, please contact your nearest representative.



DANGER!

If it is suspected that the primary measuring tube has failed, de-pressurise the meter and remove it from service as soon as it is safe to do so.

1.6 Dirty gas

Dirty gas is gas that carries sand or other solid particles. Dirty gas causes excessive wear to the primary measuring tube that can eventually result in complete tube failure. In some situations tube failure where gas is being measured, can be very dangerous.



DANGER!

If the meter is being used to measure gas and there is a risk that the gas might be dirty, you must fit a filter upstream of the meter to catch solid particles.

1.7 Safety instructions from the manufacturer

1.7.1 Copyright and data protection

The contents of this document have been created with great care. Nevertheless, we provide no guarantee that the contents are correct, complete or up-to-date.

The contents and works in this document are subject to copyright. Contributions from third parties are identified as such. Reproduction, processing, dissemination and any type of use beyond what is permitted under copyright requires written authorisation from the respective author and/or the manufacturer.

The manufacturer tries always to observe the copyrights of others, and to draw on works created in-house or works in the public domain.

The collection of personal data (such as names, street addresses or e-mail addresses) in the manufacturer's documents is always on a voluntary basis whenever possible. Whenever feasible, it is always possible to make use of the offerings and services without providing any personal data.

We draw your attention to the fact that data transmission over the Internet (e.g. when communicating by e-mail) may involve gaps in security. It is not possible to protect such data completely against access by third parties.

We hereby expressly prohibit the use of the contact data published as part of our duty to publish an imprint for the purpose of sending us any advertising or informational materials that we have not expressly requested.

1.7.2 Disclaimer

The manufacturer will not be liable for any damage of any kind by using its product, including, but not limited to direct, indirect or incidental and consequential damages.

This disclaimer does not apply in case the manufacturer has acted on purpose or with gross negligence. In the event any applicable law does not allow such limitations on implied warranties or the exclusion of limitation of certain damages, you may, if such law applies to you, not be subject to some or all of the above disclaimer, exclusions or limitations.

Any product purchased from the manufacturer is warranted in accordance with the relevant product documentation and our Terms and Conditions of Sale.

The manufacturer reserves the right to alter the content of its documents, including this disclaimer in any way, at any time, for any reason, without prior notification, and will not be liable in any way for possible consequences of such changes.

1.7.3 Product liability and warranty

The operator shall bear responsibility for the suitability of the device for the specific purpose. The manufacturer accepts no liability for the consequences of misuse by the operator. Improper installation or operation of the devices (systems) will cause the warranty to be void. The respective "Standard Terms and Conditions" which form the basis for the sales contract shall also apply.

1.7.4 Information concerning the documentation

To prevent any injury to the user or damage to the device it is essential that you read the information in this document and observe applicable national standards, safety requirements and accident prevention regulations.

If this document is not in your native language and if you have any problems understanding the text, we advise you to contact your local office for assistance. The manufacturer can not accept responsibility for any damage or injury caused by misunderstanding of the information in this document.

This document is provided to help you establish operating conditions, which will permit safe and efficient use of this device. Special considerations and precautions are also described in the document, which appear in the form of icons as shown below.

1.7.5 Warnings and symbols used

Safety warnings are indicated by the following symbols.



DANGER!

This warning refers to the immediate danger when working with electricity.



DANGER!

This warning refers to the immediate danger of burns caused by heat or hot surfaces.



DANGER!

This warning refers to the immediate danger when using this device in a hazardous atmosphere.



DANGER!

These warnings must be observed without fail. Even partial disregard of this warning can lead to serious health problems and even death. There is also the risk of seriously damaging the device or parts of the operator's plant.



WARNING!

Disregarding this safety warning, even if only in part, poses the risk of serious health problems. There is also the risk of damaging the device or parts of the operator's plant.



CAUTION.

Disregarding these instructions can result in damage to the device or to parts of the operator's plant.



INFORMATION!

These instructions contain important information for the handling of the device.



LEGAL NOTICE!

This note contains information on statutory directives and standards.



HANDLING

This symbol designates all instructions for actions to be carried out by the operator in the specified sequence.

RESULT

This symbol refers to all important consequences of the previous actions.

1.8 Safety instructions for the operator




WARNING!

In general, devices from the manufacturer may only be installed, commissioned, operated and maintained by properly trained and authorized personnel.

This document is provided to help you establish operating conditions, which will permit safe and efficient use of this device.


2.1 Scope of delivery

Compact version

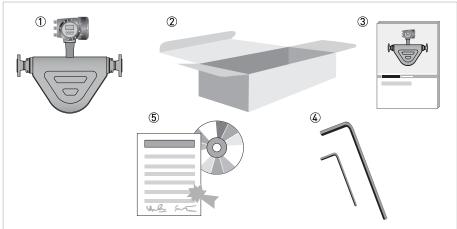

- 1 Mass flowmeter.
- ② Carton.
- 3 Documentation.
- 4 2.5 mm and 5 mm hex head tools.
- ⑤ CD-ROM and calibration certificate.

Remote version

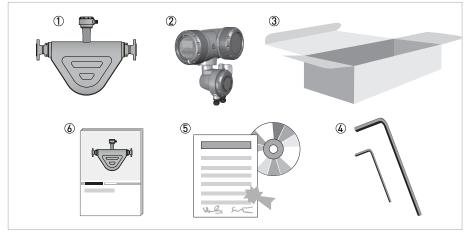


- ① Mass flowmeter.
- ② Converter. This will be either: field (as shown), wall or rack.
- ③ Carton.
- ② 2.5 mm and 5 mm hex head tools.
- (5) CD-ROM and calibration certificate.
- 6 Documentation.

If any items are missing, please contact the manufacturer.

If your meter has flange connections, the flange specification is stamped on the outer edge of the flange. Check that the specification on the flange is the same as your order.

2.1.1 Meters with hygienic connections

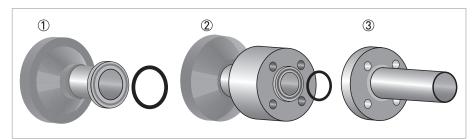

- ① Fully welded the 0-rings between the meter and the process pipework are not supplied as standard but can be ordered.
- ② DIN 11864-2 Form A the O-rings between the Form A and Form B parts of the connection are not supplied as standard but can be ordered.
- The 11864-2 Form B is not supplied as part of this connection but it can be ordered.

Inspect the condition of all seals between the meter and the process line (including seals supplied as part of the hygienic adapter) at regular intervals and replace them as necessary.

The time between inspections must be based on the seal material and the process conditions.

2.2 Nameplates



INFORMATION!

Look at the device nameplate to ensure that the device is delivered according to your order. Check for the correct supply voltage printed on the nameplate.

2.3 Dual Seal

To comply with the requirements of ANSI/ISA -12.27.01-2011 "Requirements for process Sealing Between electrical systems and Flammable or Combustible process Fluids" a secondary seal is incorporated into all OPTIMASS / GAS products. If the primary seal fails, the secondary seal will prevent escaping fluid reaching the electronic compartment.

Pressures and / or temperatures are limited by tube, temperature, connection and Ex limits. Check the meter nameplates and relevant documentation for full details. On all meters operating on gas measurement, the casing of the meter is fitted with a burst disc. If the primary seal (tube) fails leakage will occur from the burst disc. Install the meter so that the burst disc is pointing away from personnel.

Liquids (Example model code: OPTIMASS 6000F S50 - LIQUID

Pressure and temperature data:

OPTIMASS 6000 / 6000F / 6400C -200°C...+230°C and 100...10000 kPa (Stainless Steel) OPTIMASS 6000 / 6000F / 6400C -50°C...+230°C and 100...20000 kPa (Hastelloy® / duplex) OPTIMASS 6000 / 6000F - HT -50°C...+400°C and 100...10000 kPa

If the primary seal fails, the casing of the meter will fill with liquid and the meter will stop working. The meter will notify the operator by displaying the status message "Sensor: Sensor

signal low" on the converter or PLC display. This is an indication that the primary seal (tube) has failed and the status of the meter should be checked.

As soon as it is safe to do so, de-pressurise the process line and remove the meter. Please contact customer service for servicing or replacement of the meter.



INFORMATION!

At high pressures, process fluid may also leak from the meter casing. This is also an indicatioin that the primary seal has failed.

Meter status:

The meter will also display the mesage "Sensor: Sensor signal low" if the measuring tubes are not completely filled with fluid. For example, if the meter is drained or re/filled.

To check the status of the meter, drain and re/fill with fluid and note the converter or PLC display. See the relevant section of the converter handbook for a list of status messages and diagnostics information.

If the meter continues to display the message: "Sensor: Sensor signal low" you MUST assume that the primary seal (tubes) has failed and the appropriate action MUST be taken.

Gases (Example model code: OPTIMASS 6000F S50 - GAS)

Pressure / temperature data:

OPTIMASS 6000 / 6000F / 6400C -200°C...+230°C and 500... 10000 kPa (Stainless Steel) OPTIMASS 6000 / 6000F / 6400C -50°C...+230°C and 500...20000 kPa (Hastelloy® / duplex) OPTIMASS 6000F - HT -50°C...+400°C and 500...10000 kPa

Pressures and/or temperatures may be further limited by tube, temperature, connection and Ex limits. Consult the meter nameplate and relevant documentation for full details.

On all meters operating on gas measurement the casing of the meter is fitted with a burst disc. If the primary seal (tube/s) fails leakage will occur from the burst disc. Install the meter so that the burst disc is pointing away from personnel.

Regular maintenance of the burst disc:

Carry out regular maintenance checks on burst discs for leakage and/or blockages. On all OPTIMASS meters, the primary seal is considered to be the measuring tube of the meter. The materials of construction of the measuring tube/s are described within the relevant sections of this handbook and the customer's product and any other fluid flowing through the tube must be compatible with the material of construction. If failure of the primary seal is suspected then the process line should be de-pressurised and the meter removed as soon as it is safe to do so. Please contact customer service for servicing or replacement of the meter.

2.4 Temperature differential and thermal shock

Temperature differential

The maximum difference between ambient temperature and process (operating) temperatures are:

Meter temperature range	Maximum temperature differential
-200°C+40°C / -328°F+104°F	210°C / 410°F
-70°C+230°C / -94°F+446°F	
-50°C+400°C / -58°F+752°F	380°C / 716°F

Thermal shock

Thermal shock occurs when there is a sudden and extreme change (shift) in process temperature. Continual shocking (cycles) reduces the life span of the meter depending on the temperature shift. Please refer to the table below for the maximum temperature shift and the number of times (cycles) that the meter can be shocked at that temperature.

Meter size	Max temperature shift	Cycles
08150	100°C / 212°F	3500
200	100°C / 212°F	2000
250	-100°C / -148°F	2000
	+100°C / +212°F	400
	+80 / +176°F	800
	+50 / +122°F	1500

Thermal shocking below these temperature shifts will increase the life span of the meter. For more information, please contact your nearest representative.

Maximum temperature rate rise

If the change in temperature (rate rise) is greater than 100°C / 212°F, the temperature rise must be over a period of time. Calculate the time required for the whole temperature rise using the table below.

Meter size	Temperature rate rise	Example
0850	6°C / 10.8°F per minute	20°C230°C / 68°F446°F = 70 minutes
		20°C400°C / 68°F752°F = 80 minutes
80200 3°C / 5.4°F per minute		20°C230°C / 68°F446°F = 70 minutes
		20°C400°C / 68°F752°F = 140 minutes
250	3°C / 5.4°F per minute ①	20°C230°C / 68°F446°F = 70 minutes

① Up to 230°C / 446°F

These limits will provide a minimum calculated life span for the meter of 2000 cycles for meter sizes 08...200 and 1000 cycles for meter size 250. Temperature rises below 100°C / 212°F, or temperature rises over a longer period of time, will increase the life span of the meter.



CAUTION!

Operation outside these limits may result in shifts in density and mass flow calibration. Repeated shocking and / or rapid heating, may also result in premature failure of the meter. However, higher thermal shocks and / or an increased number of cycles are possible at lower working pressures. For more information, please contact your nearest representative.

2.5 Functional safety (SIL capable converter)

The meter can be used to measure mass, volume and density at SIL 2 (single channel architecture) and SIL 3 (multi-channel architecture with redundancy).

For more information please refer to the Safety manual.

3.1 General notes on installation



INFORMATION!

Inspect the packaging carefully for damages or signs of rough handling. Report damage to the carrier and to the local office of the manufacturer.



INFORMATION!

Do a check of the packing list to make sure that you have all the elements given in the order.




INFORMATION!


Look at the device nameplate to ensure that the device is delivered according to your order. Check for the correct supply voltage printed on the nameplate.


3.2 Storage


- Store the device in a dry and dust-free location.
- Avoid direct exposure to the sun.
- Store the device in its original packing.
- Do not allow the ambient temperature to fall below -50° C / -58° F or rise above $+85^{\circ}$ C / $+185^{\circ}$ F. (-40° C / -40° F and $+70^{\circ}$ C / $+158^{\circ}$ F. where a SIL capable converter has been supplied)

3.3 Handling

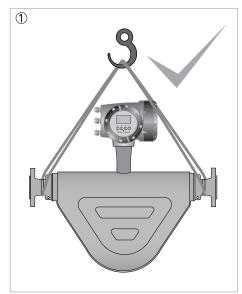

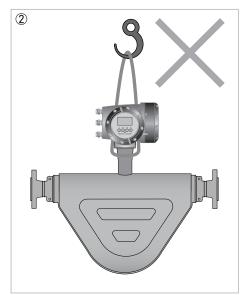

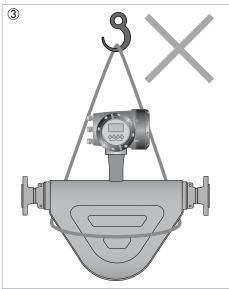


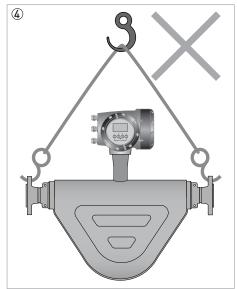


- $\textcircled{\scriptsize 1}$ Use a well maintained sling to lift the meter by the spigots.
- 2 DO NOT lift the meter by the converter housing or the electronics stem.
 3 DO NOT lift the meter by the meter body.
- 4 DO NOT lift the meter using the flange bolt holes.

3.4 Installation conditions

3.4.1 Supporting the meter

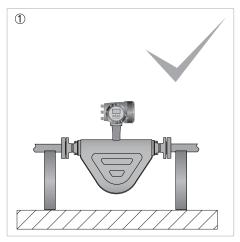


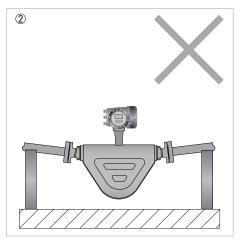



- $\begin{tabular}{ll} \textcircled{1} & \textbf{Support the weight of the meter on the process pipework.} \end{tabular}$
- ② DO NOT leave a long pipe run between the meter and the support. This can cause damage to the meter, especially on larger meter sizes.


3.4.2 Mounting the meter


Mounting positions

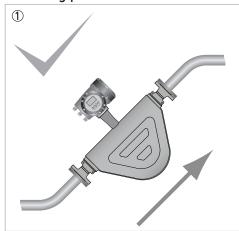


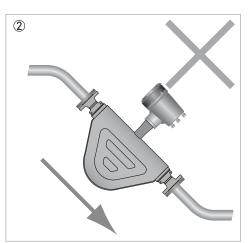

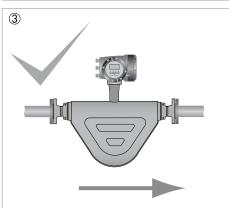

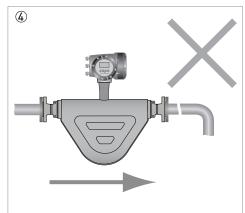

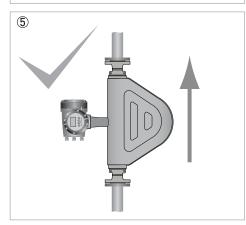


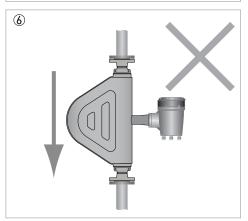


- ① The meter can be mounted at an angle but it is recommended that the flow is uphill.
- ② Avoid mounting the meter with the flow running downhill because it can cause siphoning. If the meter has to be mounted with the flow running downhill, install an orifice plate or control valve downstream of the meter to maintain backpressure.
- 3 Horizontal mounting with flow running left to right.
- Avoid mounting meter with long vertical runs after the meter as it can cause cavitation. Where the installation includes a vertical run after the meter, install an orifice plate or control valve downstream to maintain backpressure.
- (5) The meter can be mounted vertically but it is recommended that the flow is uphill.
- (a) Avoid mounting the meter vertically with the flow running downhill. This can cause siphoning. If the meter has to be installed this way, install an orifice plate or control valve downstream to maintain backpressure.

3.4.3 Gas / liquid build up


In certain applications, the design of the meter can cause either gas or liquid to build up in the measuring tube.

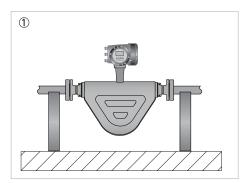

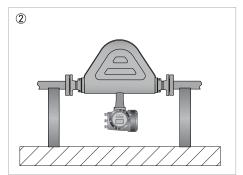

- ① Where liquids are being measured, mount the meter as shown. This will prevent gas building up in the measuring tube, when there is no flow.
- ② Where gases are being measured, mount the meter as shown. This will prevent liquids building up in the measuring tube, when there is no flow.


3.4.4 Side mounting

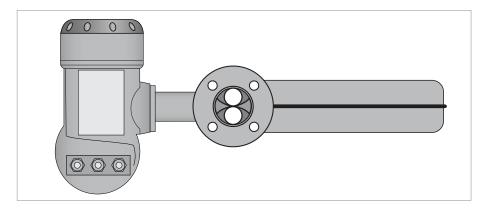

The meter can be installed with the converter (or remote junction box) on the side of the meter so that the measuring tubes are sitting one above the other. Avoid this method of installation where there is a two phase process flow, or where the process fluid contains gas. If this situation cannot be avoided, please contact the manufacturer for advice.

3.4.5 Cross talk


Where more than one meter is being installed, a very high level of immunity to cross talk means that the meters can be mounted within close proximity to each other. The meters can be mounted either in series or parallel, as shown.

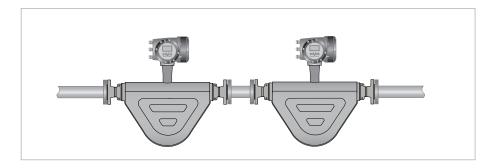




INFORMATION!


Where the meters are installed in series, it is strongly recommended that the process pipe diameter remains constant. For more information, please contact the manufacturer.

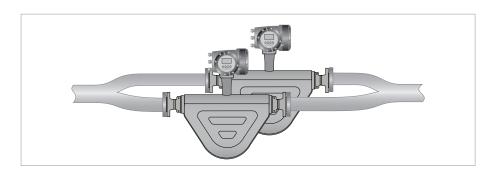

3.4.6 Flange connections

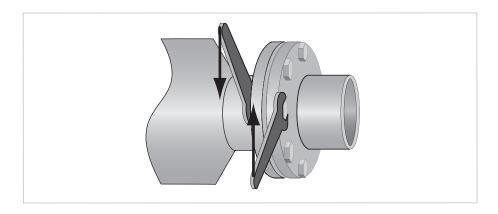


Tighten the flange bolts evenly and in turn.

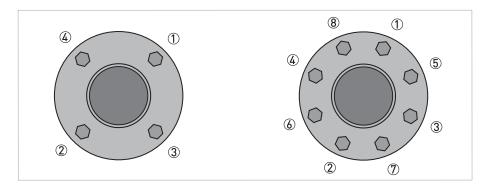

Use a regular pattern to tighten the bolts evenly


3.4.7 Maximum pipework forces (end loadings)

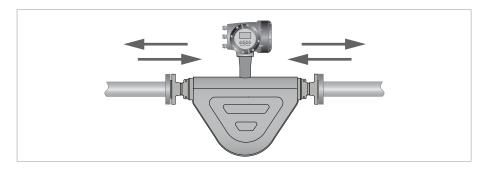

Mass flowmeters have a maximum level of force (negative or positive) that can be applied to the ends of the meter. Refer to the table below for permitted forces.


Please refer to the table in the technical data section of this Handbook for the maximum end loadings.

3.4.8 Pipework reducers

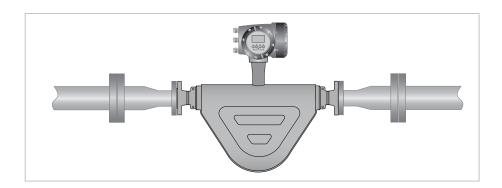

Always avoid extreme step changes in pipe size. Use pipework reducers, where there is a large difference between pipework size and meter flanges.


3.4.9 Flexible connections

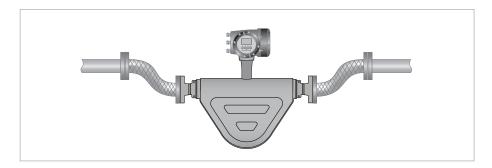

Flexible connections can be used but because of the high flow rates associated with large diameter meters, it is recommended that flexible connections are not used on meters larger than size 80.

3.4.10 Hygienic installations

Mounting the meter for hygienic applications

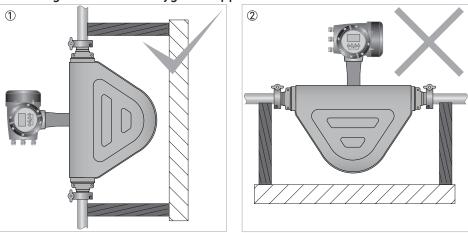

- ① Install the meter vertically to allow self draining.
- 2 DO NOT install the meter horizontally.

Where the meter has been approved by the sanitary requirements of the European Hygienic Engineering and Design Group, you MUST give consideration to:

- Installation install the meter at an angle to allow self-draining (see illustration).
- Cleaning fluids cleaning fluids should flow uphill with a velocity rate greater than 1.5 m/s / 5ft/s. If the process flow is downhill, install a flow restrictor downstream of the meter. This will make sure that the meter is completely filled with the cleaning fluid.
- Process connections and seals MUST be in accordance with EHEDG documentation.


The manufacturer also recommends that you refer to EHEDG (www.ehedg.org) document number 8 "HYGIENIC EQUIPMENT DESIGN CRITERIA".

3.4.11 Heating and insulation

Insulation

The meter can be insulated to a maximum depth as shown (A). Do not insulate above this depth as this will cause the electronics to overheat.

Insulation

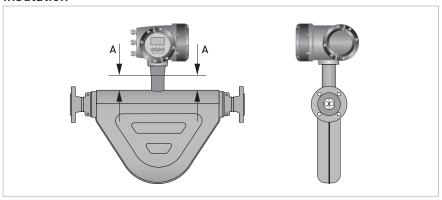

	S08	S10	S15	S25	S50	S80	S100	S150	S200	S250
Dimension A [mm]	100	100	100	100	100	100	100	100	100	100
Dimension A [inches]	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9

Factory fitted heating jacket

If the meter has been ordered with a heating jacket, it will be supplied with DN15 PN40 to EN 1092-1 or 1/2° ASME150 flange connections.

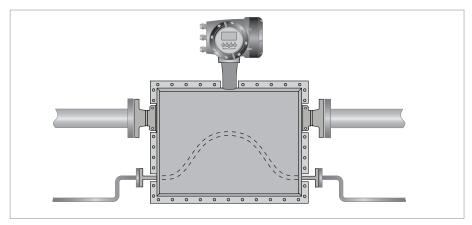


Figure 3-1: The loop inside the heating jacket, carries the heating medium.

Connecting / using the heating jacket

- Use rigid or reinforced flexible hoses to connect the heating jacket to the heat source.
- The heating jacket / loop material is SS316.
- Suitable heating mediums are steam or hot oil. Avoid the use of heating mediums that can cause crevice corrosion in Stainless Steel.

- Where liquid is being used, set up the pipe configuration so that air can be vented from the system.
- Where steam is being used, set up the pipe configuration so that condensation can be drained
 off
- Gradually heat the jacket to working temperature before flowing the process fluid through the meter.



CAUTION!

The design of the heating jacket is such that NO end load pressure (negative or positive) can be applied. The manufacturer recommends that (where possible) flexible hoses are used to connect to the heat source.



CAUTION!

The maximum heating pressure and temperature for heating jackets is 10 barg at 230°C / 145 psig at 446°F or 5 barg at 400°C / 72.5 psig at 752°F

3.4.12 Purge ports

If the meter has been ordered with a purge port, it will be supplied with NPT female connections which are clearly marked. The connections are sealed with NPT plugs and PTFE tape.



CAUTION!

DO NOT remove these plugs.

The meter is factory sealed with a dry nitrogen gas fill and if moisture is allowed to enter the meter casing it will cause damage. The plugs should only be removed to purge the meter casing in the event that the primary measuring tube fails.

If it is suspected that the primary measuring tube has failed, de-pressurise the meter and remove it from service, as soon as it is safe to do so.

3.4.13 Burst discs

If the meter has been ordered with a burst disc, it will be supplied with the disc fitted. The failure pressure of the disc is $10 \text{ barg at } + 20^{\circ}\text{C} / 145 \text{ psiq at } +68^{\circ}\text{F}$.



CAUTION

The fitted burst disc will be suitable for the flow rates and process conditions specified on the original order. If the process conditions alter in any way, it is recommended that you contact the manufacturer for advice regarding suitability.

If the process product is hazardous (in any way) it is recommended that an exhaust tube is connected to the NPT male thread of the burst disc and the pipe routed so that the process product can be discharged to a safe area. Use a tube with a diameter large enough AND routed in such a way, so that pressure cannot build up in the meter case.




INFORMATION!


For gas applications, the burst disc must be specified at the time of ordering.

3.4.14 Zero calibration

The procedure for zero calibration is contained in the converter handbook. However, the following information should be considered when installing the meter.

Zero calibration

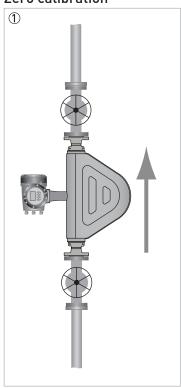


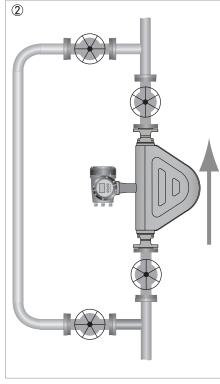


- ① Where the meter has been installed vertically, install shut-off valves either side of the meter to assist with zero calibration.
- ② If the process flow cannot be stopped, install a bypass section for zero calibration.

3.4.15 Sunshades

The meter MUST be protected from strong sunlight.

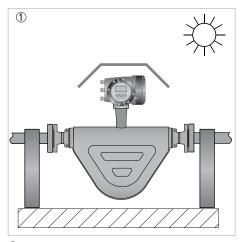

- Horizontal installation
- ② Vertical installation

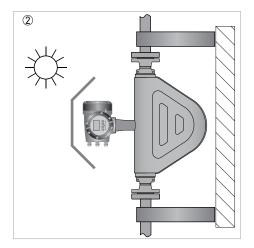

4.1 Safety instructions



DANGER!

All work on the electrical connections may only be carried out with the power disconnected. Take note of the voltage data on the nameplate!



DANGER!

Observe the national regulations for electrical installations!



DANGER!

For devices used in hazardous areas, additional safety notes apply; please refer to the Ex documentation.



WARNING!

Observe without fail the local occupational health and safety regulations. Any work done on the electrical components of the measuring device may only be carried out by properly trained specialists.



INFORMATION!

Look at the device nameplate to ensure that the device is delivered according to your order. Check for the correct supply voltage printed on the nameplate.

4.2 Electrical and I/O connections

For information regarding electrical and I/O connections, please refer to the handbook for the relevant signal converter.

5.1 Spare parts availability

The manufacturer adheres to the basic principle that functionally adequate spare parts for each device or each important accessory part will be kept available for a period of 3 years after delivery of the last production run for the device.

This regulation only applies to spare parts which are subject to wear and tear under normal operating conditions.

5.2 Availability of services

The manufacturer offers a range of services to support the customer after expiration of the warranty. These include repair, maintenance, technical support and training.



INFORMATION!

For more precise information, please contact your local sales office.

5.3 Returning the device to the manufacturer

5.3.1 General information

This device has been carefully manufactured and tested. If installed and operated in accordance with these operating instructions, it will rarely present any problems.



CAUTION!

Should you nevertheless need to return a device for inspection or repair, please pay strict attention to the following points:

- Due to statutory regulations on environmental protection and safeguarding the health and safety of the personnel, the manufacturer may only handle, test and repair returned devices that have been in contact with products without risk to personnel and environment.
- This means that the manufacturer can only service this device if it is accompanied by the following certificate (see next section) confirming that the device is safe to handle.



CAUTION!

If the device has been operated with toxic, caustic, radioactive, flammable or water-endangering products, you are kindly requested:

- to check and ensure, if necessary by rinsing or neutralising, that all cavities are free from such dangerous substances,
- to enclose a certificate with the device confirming that is safe to handle and stating the product used.



5.3.2 Form (for copying) to accompany a returned device



CAUTION!

To avoid any risk for our service personnel, this form has to be accessible from outside of the packaging with the returned device.

Company:		Address:		
Department:		Name:		
Tel. no.:		Fax no. and/or Email address:		
Manufacturer's order no. or serial no.:				
The device has been operated with the follow	wing n	nedium:		
This medium is:	radio	pactive		
	wate	r-hazardous		
	toxic	ic		
	caus	ustic		
	flam	mable		
	We c	hecked that all cavities in the device are free from such substances.		
We h		have flushed out and neutralized all cavities in the device.		
We hereby confirm that there is no risk to podevice when it is returned.	ersons	s or the environment through any residual media contained in the		
Date:		Signature:		
Stamp:				

5.4 Disposal



CAUTION!

Disposal must be carried out in accordance with legislation applicable in your country.


Separate collection of WEEE (Waste Electrical and Electronic Equipment) in the European Union:



According to the directive 2012/19/EU, the monitoring and control instruments marked with the WEEE symbol and reaching their end-of-life **must not be disposed of with other waste**. The user must dispose of the WEEE to a designated collection point for the recycling of WEEE or send them back to our local organisation or authorised representative.


6.1 Measuring principle (twin tube)

Meter from the side, showing tube layout

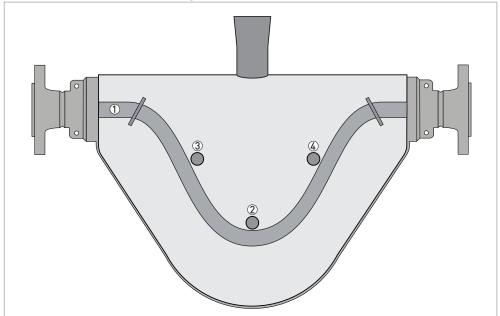

- Measuring tubes
- 2 Drive coil
- 3 Sensor 1
- Sensor 2


Static meter not energised and with no flow

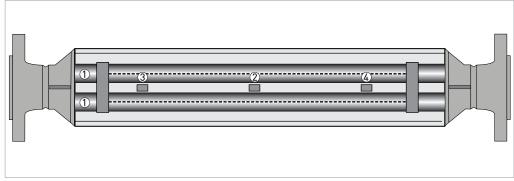

- Measuring tubes
- ② Drive coil
- 3 Sensor 1
- Sensor 2

A Coriolis twin tube mass flowmeter consists of two measuring tubes 1 a drive coil 2 and two sensors 3 and 4) that are positioned either side of the drive coil.


Energised meter

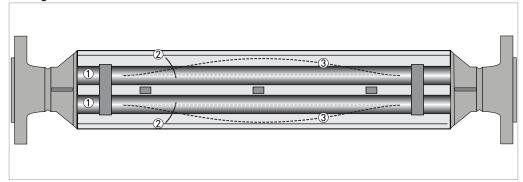

- Measuring tubes
- ② Direction of oscilation
- 3 Sine wave

When the meter is energised, the drive coil vibrates the measuring tubes causing them to oscillate and produce a sine wave ③. The sine wave is monitored by the two sensors.

Energised meter with process flow

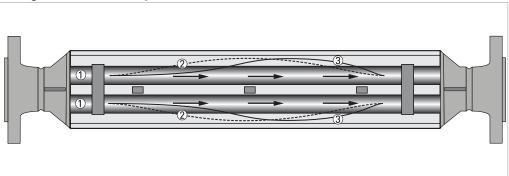

- ① Process flow
- 2 Sine wave
- 3 Phase shift

When a fluid or gas passes through the tubes, the coriolis effect causes a phase shift in the sine wave that is detected by the two sensors. This phase shift is directly proportional to the mass flow.

Density measurement is made by evaluation of the frequency of vibration and temperature measurement is made using a Pt500 sensor.

6.2 Technical data



INFORMATION!

- The following data is provided for general applications. If you require data that is more relevant to your specific application, please contact us or your local sales office.
- Additional information (certificates, special tools, software,...) and complete product documentation can be downloaded free of charge from the website (Downloadcenter).

Measuring system

Measuring principle	Coriolis mass flow		
Application range	Mass flow and density measurement of fluids, gases and solids		
Measured values	Mass, density, temperature		
Calculated values	Volume, referred density, concentration, velocity		
Sensor model range			
Stainless Steel 316L 08250	Compact / remote 100 barg @ 20°C / 1450 psig @ 68°F, temp. range -70°C+230°C / -94°F+446°F		
	Remote only 100 barg @ 20°C / 1450 psig @ 68°F, temp. range -50°C+400°C / -58°F+752°F		
	Remote only 100 barg @ 20°C / 1450 psig @ 68°F, temp. range -200°C+40°C / -364°F+104°F		
Hastelloy® 0880	Compact / remote 200 barg @ 20°C / 2900 psig @ 68°F, temp. range -70°C+230°C / -58°F+446°F		
Duplex Stainless Steel 100200	Compact / remote 200 barg @ 20°C / 2900 psig @ 68°F, temp. range -50°C+230°C / -58°F+446°F		

Design

3		
Basic	System consists of a measuring sensor and a converter to process the output signal	
Features	Fully welded maintenance free sensor with twin V-shaped measuring tube	
Variants		
Compact version	Integral converter	
Remote version	Available with field or wall versions of the converter	

Measuring accuracy

Mass (standard)				
Liquid (≥ 20:1 of nominal flow rate)	±0.1% of actual measured flow rate			
Liquid (< 20:1 of nominal flow rate)	±zero stability (see zero stability below)			
Gas	±0.35% of actual measured flow rate + zero stability			
Mass (optional) ①				
Liquid (≥ 10:1 of nominal flow rate)	±0.05% of actual measured flow rate			
Liquid (< 10:1 of nominal flow rate)	± zero stability (see zero stability below)			
Repeatability				
Liquid	Better than 0.05% plus zero stability (includes the combined effects of repeatability, linearity and hysteresis)			
Gas	Better than 0.2% plus zero stability (includes the combined effects of repeatability, linearity and hysteresis)			

Zero stability				
Meter size	Standard temperature	High temperature		
08	< 0.03 kg/h < 0.05 kg/h			
10	< 0.06 kg/h	< 0.10 kg/h		
15	< 0.19 kg/h	< 0.30 kg/h		
25	< 0.95 kg/h	< 1.52 kg/h		
50	< 1.8 kg/h	< 2.8 kg/h		
80	< 3.9 kg/h	< 6.24 kg/h		
100	< 8.8 kg/h	< 14.0 kg/h		
150	< 16.0 kg/h	< 25.6 kg/h		
200	< 30.0 kg/h	< 44.0 kg/h		
250	< 50.0 kg/h	< 80.0 kg/h		
Reference conditions				
Product	Water			
Temperature	+20°C / +68°F			
Operating pressure	1 barg / 14.5 psig			
Effect on sensor zero point caused by a sh	nift in process temperature			
Standard temperature range				
All materials sizes 0810	0.0010% of nominal flow per 1°C / 0.00056% of nominal flow per 1°F			
All materials sizes 15250	0.00075% of nominal flow per 1°C / 0.00042% of nominal flow per 1°F			
High temperature range				
All materials sizes 08250	0.008% of nominal flow per 1°C / 0.004	44% of nominal flow per 1°F		
Pressure effect on mass flow rate				
All materials sizes 0850	0.005% per 1 barg / 0.00034 % per 1 p	sig		
All materials sizes 80100	0.0055% per 1 barg / 0.00038 % per 1	psig		
All materials sizes 150250	0.008% per 1 barg / 0.00055 % per 1 p	sig		
Density				
Measuring range	1003000 kg/m ³ / 6187 lb/ft ³			
Accuracy	±1 kg/m ³ / ±0.06 lb/ft ³			
On site calibration	±0.2 kg/m ³ / ±0.012 lb/ft ³			
Process temperature effect	0.015 g/l per 1°C / 0.0083 g/l per 1°F			
Temperature				
Accuracy	± 0.5 °C / ± 0.9 °F (± 0.5 % of reading)			

Operating conditions

Nominal flow rates (1 barg / 14.5 psig pressure drop)				
08	600 kg/h / 22 lb/min			
10	1200 kg/h / 44 lb/min			
15	3800 kg/h / 139 lb/min			
25	19000 kg/h / 698 lb/min			
50	35000 kg/h / 1286 lb/min			
80	78000 kg/h / 2866 lb/min			
100	175000 kg/h / 6430 lb/min			
150	320000 kg/h / 11758 lb/min			

200	550000 kg/h / 20209 lb/min	
250	1000000 kg/h / 36743 lb/min	
	Assumes operating density 1000 kg/m ³ / 62.4 lb/ft ³	
	For Hastelloy® meters, assume a pressure drop of 1.15 barg	
Maximum flow rates		
All meters	150% of nominal flow rate	

Environmental

Ambient temperature		
Compact meter	Standard conveter	SIL capable converter
Aluminium converter	-40+65°C / -40+149°F -40+55°C / -40+131°F	
Stainless Steel converter	-40+55°C / -40+131°F	-40+55°C / -40+131°F
Remote meter	Standard converter	SIL capable converter
Standard temperature range	-40+65°C / -40+149°F	-40+55°C / -40+131°F
Cryogenic temperature range	-20+65°C / -4+149°F	-40+55°C / -40+131°F
Hazardous Area versions	Refer to temperature limits	
Protection category (Acc. toEN 60529	IP 67, NEMA 4X	
Vibration (acc IEC 60068-2-6)	10-150-10 Hz with 0.15 mm for 106	0 Hz, 20 m/s ² for 60150 Hz
Process temperatures		
Standard temperature range (flange connections)	Extended stem	Short stem
Safe area	-70+230°C / -94+446°F	-70+150°C / -94+302°F
Hazardous area	-50+230°C / -58+446°F	-50°C+150°C / -58+302°F
High temperature range	-50+400°C / -58+752°F	N/A
Cryogenic temperature range	-200+40°C / -328+104°F	-200+40°C / -328+104°F
Standard temperature range (hygienic connections)	Extended stem	Short stem
Safe area	-70+150°C / -94+302°F	-70+150°C / -94+302°F
Hazardous area	-50+150°C / -58+302°F	-50+150°C / -58+302°F
Nominal pressure at 20°C / 68°F		
Measuring tube	SS 316 / 316L Hastelloy® C22 / S3	
FM / PED	-1100 barg / -14.51450 psig	-1200 barg / -14.52900 psi
CRN / ASME B31.3	-1100 barg / -14.51450 psig	Pending
Outer casing burst pressure ②		
08	≈ 100 barg	
10		
15		
25		
50	≈ 70 barg	
80		
100	≈ 10 barg	
150		
200		
250		

Fluid properties	
Permissible physical condition Liquids, gases, slurries	
Permissible gas content (volume)	Contact manufacturer for information.
Permissible solid content (volume)	Contact manufacturer for information.
Installation conditions	
Inlet / outlet runs	None required

Materials

Stainless Steel (316 / 316L) meter		
Measuring tubes / Flanges	Stainless Steel AISI 316 / 316L (1.4401 / 1.4404) dual certified	
Spigots	Stainless Steel CF3M (1.4409)	
Bridge	Stainless Steel AISI 304 / 304L (1.4301 / 1.4307) dual certified or AISI 316 / 316L (1.4401 / 1.4404) dual certified	
Outer casing	Stainless Steel AISI 316 / 316L (1.4401 / 1.4404) dual certified	
Stainless Steel (S31803) meter		
Measuring tubes / Flanges	Stainless Steel UNS 31803 (1.4462)	
Spigots	Stainless Steel J92205 (1.4470)	
Bridge	Stainless Steel AISI 304 / 304L (1.4301 / 1.4307) dual certified or AISI 316 / 316L (1.4401 / 1.4404) dual certified	
Outer casing	Stainless Steel AISI 316 / 316L (1.4401 / 1.4404) dual certified	
Hastelloy® C22 meter		
Measuring tubes / raised face	Hastelloy® C22	
(Backing) flanges	Stainless Steel AISI 316 / 316L (1.4401 / 1.4404) dual certified	
Bridge	Stainless Steel AISI 316 / 316L (1.4401 / 1.4404) dual certified	
Outer casing	Stainless Steel AISI 316L (1.404) dual certified	
Heating jacket version		
Heating loop and insulation jacket	Stainless Steel AISI 316 (1.4401)	
All versions		
Junction box (remote version)	Die-cast Aluminium (polyurethane coating)	
	Optional Stainless Steel 316 (1.4401)	

Process connections

Flange		
DIN (EN 1092-1 2007)	DN10300 / PN16160	
ASME (B616.5)	½12" / ASME 1501500	
JIS (2220 2001)	10A300A / 1020K (10K maximum allowable temperature 300°C / 572°F)	
Hygienic (0850 only)		
Tri-clover	3/44"	
Tri-clamp DIN 32676	DN15100	
Tri-clamp ISO 2852	14"	
DIN 11864-2 Form A (female)	DN15100	
Male thread DIN 11851 (threaded sanitary connection)	DN15100	
Male thread SMS	25100 mm / 14"	

Electrical connections

Electrical connections	For full details, including: power supply, power consumption etc., see technical data for the relevant signal converter.
1/0	For full details of I/O options, including data streams and protocols, see technical data for the relevant signal converter.

Approvals

CE	The device fulfils the statutory requirements of the CE directive. The manufacturer certifies that these requirements have been met by applying the CE mark.
CRN	acc to: ASME B31.3 (most recent and up to date version)
NACE	MR0175 / ISO 15156 ("Sulphide Stress Corrosion Cracking Resistant Metalic Materials for Oll Field Equipment") and MR0103 ("Materials Resistant to Sulfide Stress Cracking in Corrosive Petroleum Refining Environments") (most recent and up to date versions)
Custody transfer	Measuring Instruments Directive (MID) MI 002 and MI 005 (most recent and up to date version)
	OIML R117-1
	OIML R137 (pending)
	Compliant with API and AGA
Functional safety	SIL2 / SIL3 (acc to: IEC 61508)
ATEX (most recent and up to date ver	rsion)
OPTIMASS 6400C non Ex i signal outp	puts
Ex d connection compartment	II 1/2 G Ex d ia IIC T6T1 Ga/Gb
	II 2 D Ex t IIIC T270°C Db
Ex e connection compartment	II 1/2 G Ex de ia IIC T6T1 Ga/Gb
	II 2 D Ex t IIIC T270°C Db
OPTIMASS 6400C Ex i signal outputs	
Ex d connection compartment	II 1/2(1) G Ex d ia [ia Ga] IIC T6T1 Ga/Gb
	II 2(1) D Ex t [ia Da] IIIC T270°C Db
Ex e connection compartment	II 1/2(1) G Ex de ia [ia Ga] IIC T6T1 Ga/Gb
	II 2(1) D Ex t [ia Da] IIIC T270°C Db
OPTIMASS 6000 / 6000F	II 1 G Ex ia IIC T6T1 Ga
	II 1 D Ex ia IIIC T270°C Da
	II 1 D Ex ia IIIC T440°C Da

 $[\]ensuremath{\textcircled{1}}$ This option is not available when the converter is being used in SIL mode

② For information only. Secondary pressure containment is NOT supplied on this meter

ATEX temperature limits

Ambient temp. T _{amb} °C	Medium temp. T _m °C	Temp. class	Max. Surface temp. °C
-4040	-5040	Т6	T80
	-50150	T3	T190
	-50230	T2-T1	T270
-4055	-5040	Т6	T80
	-50150	T3	T190
	-50230	T2-T1	T270
-4065	-5040	Т6	T80
	-50150	T3	T190
	-50230	T2-T1	T270
Cryogenic version			<u> </u>
-2065	-20040	T6-T1	T80
OPTIMASS 6400C with alu	ıminium converter housing, v	with or without heating jack	et / insulation
-4040	-5040	Т6	T80
	-50150	T3	T190
	-50230	T2-T1	T270
-4050	-5040	Т6	T80
	-50150	T3	T190
	-50230	T2-T1	T270
-4065	-5065	T4-T1	T105
Cryogenic version			
-4065	-20040	T6-T1	T80
OPTIMASS 6400C with SS	converter housing, with or w	vithout heating jacket / insu	lation.
-4040	-5040	Т6	T80
	-50150	T3	T190
	-50230	T2-T1	T270
-4050	-5040	Т6	T80
	-50150	Т3	T190
	-50230	T2-T1	T270
-4060	-5060	T4-T1	T100
Cryogenic version			·
-25+60	-20040	T6-T1	T80
High temperature version	ns		·
OPTIMASS 6000F - HT wit	h aluminium junction box, he	eating jacket and insulation	
-4040	-5040	Т6	T80
	-50230	T2	T270
	-50400	T1	T440
-4055	-5040	Т6	T80
	-50230	T2	T270
	-50400	T1	T440

-4060	-5040	T6	T80
	-50230	T2	T270
	-50400	T1	T440
-4065	-50350	T1	T390
OPTIMASS 6000F - HT with	SS junction box, heating jacket	and insulation	
-4040	-5040	T6	T80
	-50230	T2	T270
	-50400	T1	T440
-4050	-5040	T6	T80
	-50230	T2	T270
	-50400	T1	T440
-4055	-5040	T6	T80
	-50230	T2	T270
	-50400	T1	T440
-4060	-50350	T1	T390
OPTIMASS 6000F - HT with	aluminium or SS junction box,	insulation but no heating jacke	t
-4040	-5040	T6	T80
	-50230	T2	T270
	-50400	T1	T440
-4055	-5040	T6	T80
	-50230	T2	T270
	-50400	T1	T440
-4065	-5040	Т6	T80
	-50230	T2	T270
	-50400	T1	T440

Maximum end loadings (Stainless Steel 316 / 316L)

		S08 / S10	S15	S25	S50	S80	S100	S150	S200	S250
Flanges										
20°C	40 barg	15 kN	25 kN	38 kN	48 kN	99 kN	130 kN	250 kN	300 kN	350 kN
	100 barg	12 kN	17 kN	19 kN	15 kN	20 kN	100 kN	120 kN	150 kN	200 kN
230°C	32 barg	7 kN	12 kN	18 kN	25 kN	45 kN	60 kN	50 kN	100 kN	150 kN
	60 barg			5 kN				20	kN	
400°C	27.4 barg	5 kN	6 kN	10 kN	12 kN	20 kN	50 kN	80 kN	100 kN	150 kN
	40 barg	4 kN		5	ĸN			20	kN	
Hygienic	: (all connections)								
150°C	10 barg	5 kN	9 kN	12 kN	12 kN	18 kN	21 kN	N/A	N/A	N/A
140°C	40 barg	3 kN	5 kN	5 kN	N/A	N/A	N/A	N/A	N/A	N/A
	25 barg	N/A	N/A	N/A	9 kN	N/A	N/A	N/A	N/A	N/A
	16 barg	N/A	N/A	N/A	N/A	12 kN	12 kN	N/A	N/A	N/A
Heating	jacket connection	าร								
1		0 kN	0 kN	0 kN	0 kN	0 kN	0 kN	0 kN	0 kN	0 kN


 $[\]ensuremath{\textcircled{1}}$ All temperature and pressure ranges

Maximum end loadings (Hastelloy® and Stainless Steel UNS S31803)

		H08 / H10	H15	H25	H50	H80	D100	D150	D200			
Flanges (not including CRN)												
20°C 200 barg 12 kN 17 kN 19 kN 15 kN 20 kN 100 kN 120 kN												
230°C	145 barg		5	kN			20 kN					
Flanges	CRN regions)											
20°C	200 barg ①	12 kN	17 kN	19 kN	15 kN	20 kN	60 kN	30 kN	10 kN			
230°C	145 barg ②			5 kN				20 kN				
Heating j	Heating jacket connections											
3		0 kN	0 kN	0 kN	0 kN	0 kN	0 kN	0 kN	0 kN			

- ① D200 limited to 180 barg at 20°C
- ② D100 and D150 limited to 120 barg at 230°C. D200 limited to 110 barg at 230°C
- 3 All temperature and pressure ranges
 - DN08...50 (axial) loads have been calculated, based on 316L schedule 40 process pipework, where un-radiographed butt welds have been used in pipe joints.
 - DN80...250 (axial) loads have been calculated, based on 316L schedule 80 process pipework, where un-radiographed butt welds have been used in pipe joints.
 - The loads shown are the maximum permitted static load. If loads are cycling (between tension and compression) these loads should be reduced. For advice, consult the manufacturer.

6.3 Measuring accuracy

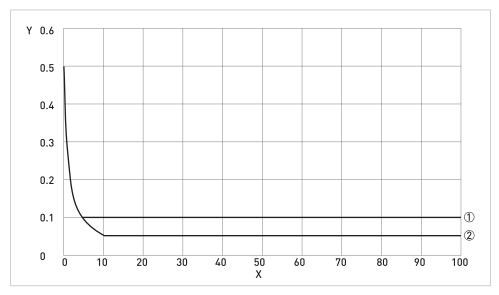

X nominal flow rate [%]

Y measuring error [%]

- Standard measuring accuracy
- ② Optional measuring accuracy (not available in SIL mode)

Measuring error

The measuring error is obtained from the combined effects of accuracy and zero stability.

Reference conditions

Product	Water
Temperature	+20°C / +68°F
Operating pressure	1 barg / 14.5 psig

6.4 Guidelines for maximum operating pressure

Always make sure that the meter is used within its operating limits.

Pressure / temperature de-rating (metric) for meters with SS 316 measuring tubes. Standard temperature range.

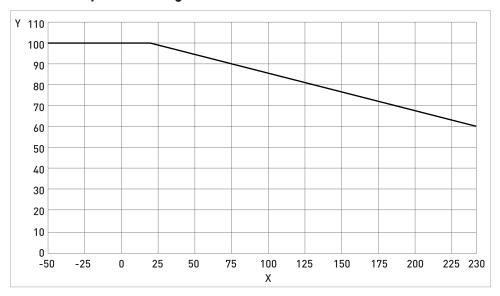


Figure 6-1: Measuring tube PED certification

X temperature [°C]

Y pressure [barg]

Pressure / temperature de-rating (imperial) for meters with SS 316 measuring tubes. Standard temperature range.



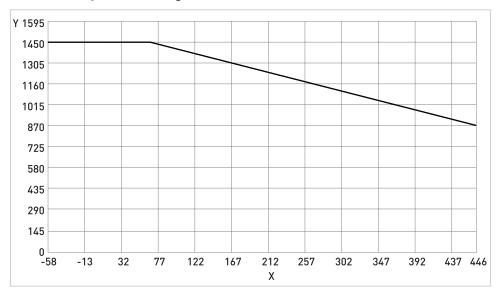



Figure 6-2: Measuring Tube PED certification

X temperature [°F] Y pressure [psig]

Pressure / temperature de-rating (metric) for meters with SS 316, PED certified measuring tubes. High temperature range.

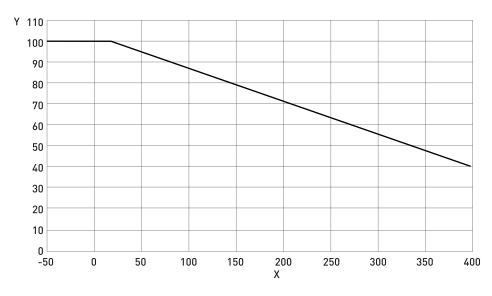


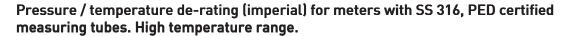

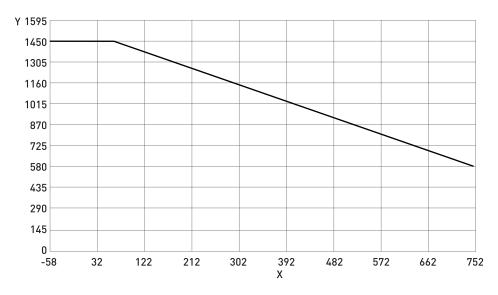



X temperature [°F] Y pressure [psig]

Pressure / temperature de-rating (metric) for meters with SS 31803 and Hastelloy® C22, PED certified measuring tubes. Standard temperature range

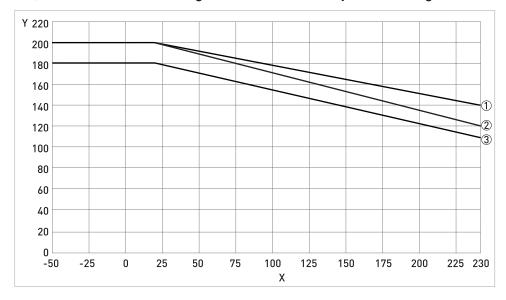

- ① PED/CRN H08...80
- ② CRN D100...150
- ③ CRN D200

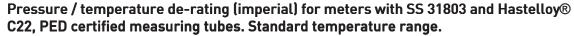


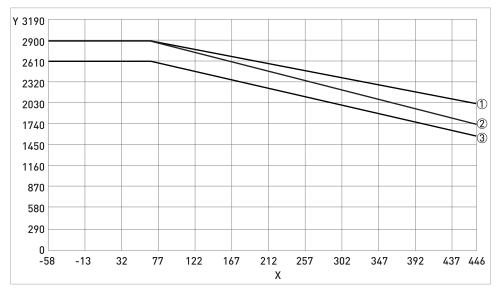



X temperature [°F] Y pressure [psig]

- ① PED/CRN H08...80
- ② CRN D100...150
- ③ CRN D200

Pressure / temperature de-rating (metric) for meters with SS 316, PED certified measuring tubes. Cryogenic temperature range.

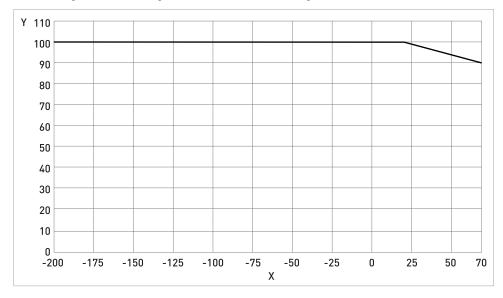

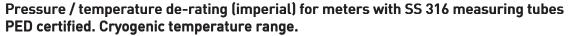

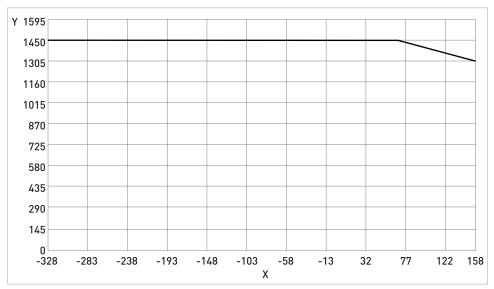


X temperature [°F] Y pressure [psig]


Flanges

- DIN flange ratings are based on EN 1092-1 2007 table G.4.1 material group 14E0
- ASME flange ratings are based on ASME B16.5 2003 table 2 material group 2.2
- JIS flange ratings are based on JIS 2220: 2001 table 1 division 1 material group 022a
- JIS 10K flanges are limited to a maximum temperature of 300°C / 572°F

Pressure / temperature de-rating (metric) for meters with hygienic connections.

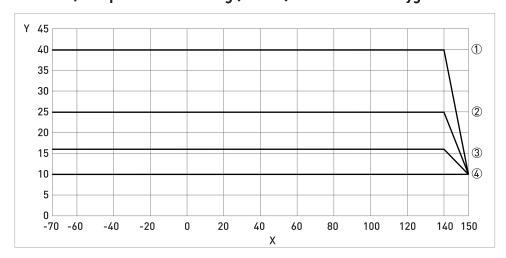

- ① SMS 1...1½", DIN 11851 DN10...40
- ② SMS 2", Tri-clamp DN10...40, DIN 11864-2 DN10...40, DIN 11851 DN50...65
- ③ SMS 3", Tri-clamp DN50...65, DIN11864-2, DIN11864-2 DN50...100, DN11851 DN80...100
- 4 SMS 4", Tri-clamp DN80...150, DIN 11864-2 DN125...150, DIN11851 DN125...150

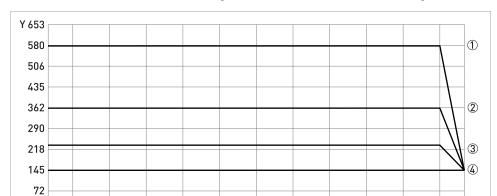

104

140

176

212

248

284 302

Pressure / temperature de-rating (imperial) for meters with hygienic connections.

X temperature [°F] Y pressure [psig]

-94 -76

- ① SMS 1...1½", DIN 11851 DN10...40
- ② SMS 2", Tri-clamp DN10...40, DIN 11864-2 DN10...40, DIN 11851 DN50...65

32

③ SMS 3", Tri-clamp DN50...65, DIN11864-2, DIN11864-2 DN50...100, DN11851 DN80...100

68

4 SMS 4", Tri-clamp DN80...150, DIN 11864-2 DN125...150, DIN11851 DN125...150

Notes

- The maximum operating pressure will be either the flange / hygienic connection rating or the measuring tube rating, WHICHEVER IS THE LOWER!
- The manufacturer recommends that the seals are replaced at regular intervals. This will maintain the hygienic integrity of the connection.

6.5 Dimensions and weights

6.5.1 Flanged versions


Meter weights

		kg											
	S08	S10	S15	S25	S50	S80	S100	S150	S200	S250			
Aluminium (compact)	9.3	10.1	12.9	23.5	29.4	58.9	94.3	193.6	443.6	911.2			
Stainless Steel (compact)	15.2	16	18.8	29.4	35.3	64.8	100.2	199.5	449.5	917.1			
Aluminium (remote)	5.8	6.6	9.4	19.9	25.9	55.4	90.8	190.1	440	907.6			
Stainless Steel (remote)	6.6	7.3	10.2	20.7	26.6	56.1	91.5	191.5	440.8	908.4			
Heating jacket add	3.	.1	4.5	7	7.9	12.7	15.7	27.6	N,	/A			

		lbs											
	S08	S10	S15	S25	S50	S80	S100	S150	S200	S250			
Aluminium (compact)	20.5	22.3	28.4	51.8	64.8	129.8	207.9	426.8	978	2008.8			
Stainless Steel (compact)	33.5	35.3	41.4	64.8	77.8	142.9	220.9	440.7	991	2021.9			
Aluminium (remote)	12.8	14.5	20.7	43.9	57.1	122.1	200.2	419.1	970	2001			
Stainless Steel (remote)	14.55	16.1	22.5	45.6	58.6	123.7	201.7	422.2	971.8	2002.7			
Heating jacket add	6	.8	9.9	15.4	17.4	28	34.6	60.8	N,	/A			

The weights shown are for meters fitted with PN40 flanges. Smaller or larger flange sizes will affect the overall weight. For further information, please contact the manufacturer.

Meter dimensions

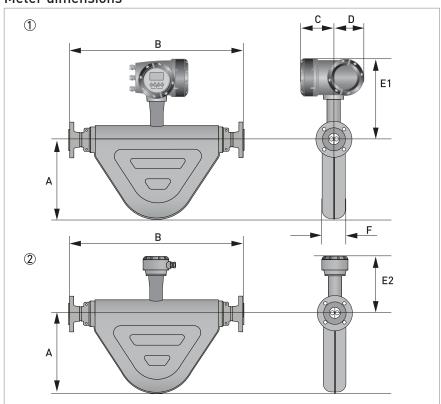

- ① Compact version
- 2 Remote version

General dimensions

		mm												
	S08	S10	S15	S25	S50	S80	S100	S150	S200	S250				
A ±3	15	156 186 282 326 411 450 555 675								805				
С		137												
D					12	3.5								
E1 ±3 ①	28	39	290	30	07	342	369	394	436	512				
E1 ±3 ②	37	75	376	393		428	455	480	522	598				
E2 ±3 ③	20)9	210	230		262	289	314	356	432				

		mm											
	S08	S10	S15	S25	S50	S80	S100	S150	S200	S250			
E2 ±3 ④	29	75	296	316		348	375	400	442	518			
E2 ±3 ⑤	33	35	336	3!	53	388	415	440	482	558			
F ± 2		81		118	130	188	219	275	355	508			

- ① compact 150°C (short stem)
- ② compact 230°C (extended stem)
- 3 remote 150°C (short stem)
- 4 remote 230°C (extended stem)
- ⑤ remote 400°C (extended stem)

	inches										
	S08	S10	S15	S25	S50	S80	S100	S150	S200	S250	
A ±0.11	6.	14	7.3	11.1	12.8	16.2	17.7	21.8	26.6	31.7	
С		4.9									
D		5.4									
E1 ±0.12 ①	11.4		11.4	12	2.0	13.5	14.5	15.5	17.2	20.2	
E1 ±0.12 ②	14	.8	14.8	15	5.5	16.8	17.9	18.9	20.5	23.5	
E2 ±0.12 ③	8.	2	8.3	9	.0	10.3	11.4	12.4	10.0	17.0	
E2 ±0.12 ④	11	.6	11.6	12	2.4	13.7	14.8	15.7	17.4	20.4	
E2 ±0.12 ⑤	13.2		13.2	13.9		15.3	16.3	17.3	19	22	
F ±0.08		3.2		4.6	5.1	7.4	8.6	10.8	14	20	

- ① compact 302°F (short stem)
- ② compact 446°F (extended stem)
- ③ remote 302°F (short stem)
- 4 remote 446°F(extended stem)
- ⑤ remote 752°F (extended stem)

Dimension B for meters with Stainless Steel measuring tubes

					mm (±5)									
	S08	S10	S15	S25	S50	S80	S100	S150	S200	S250				
PN16														
DN80	DN80 970													
DN100	-	-	-	-	-	-	1000	1154	-	-				
DN150	-	-	-	-	-	-	-	1200	1572	-				
DN200	-	-	-	-	-	-	-	-	1586	-				
DN250	-	-	-	-	-	-	-	-	-	2100				
DN300	-	-	-	-	-	-	-	-	-	2026				
PN40														
DN10	335	347	-	-	-	-	-	-	-	-				
DN15	341	353	510	-	-	-	-	-	-	-				
DN25	-	-	514	600	-	-	-	-	-	-				
DN40	-	-	-	610	709	-	-	-	-	-				
DN50	-	-	-	-	715	895	-	-	-	-				

	mm (±5)												
	S08	S10	S15	S25	S50	S80	S100	S150	S200	S250			
DN80	-	-	-	-	-	915	986	-	-	-			
DN100	-	-	-	-	-	-	1000	1180	-	-			
DN150	-	-	-	-	-	-	-	1200	1612	-			
DN200	-	-	-	-	-	-	-	-	1638	-			
DN250	-	-	-	-	-	-	-	-	-	2080			
DN300	-	-	-	-	-	-	-	-	-	2100			
PN63													
DN50	-	-	-	-	743	923	-	-	-	-			
DN80	-	-	-	-	-	943	1014	-	-	-			
DN100	-	-	-	-	-	-	1026	1206	-	-			
DN150	-	-	-	-	-	-	-	1240	1652	-			
DN200	-	-	-	-	-	-	-	-	1682	-			
DN250	-	-	-	-	-	-	-	-	-	2120			
DN300	-	-	-	-	-	-	-	-	-	2150			
PN100		ı	ı		ı	I		ı	ı	I			
DN10	355	367	-	-	-	-	-	-	-	-			
DN15	355	367	524	-	-	-	-	-	-	-			
DN25	-	-	550	636	-	-	-	-	-	-			
DN40	-	-	-	644	743	-	-	-	-	-			
DN50	-	-	-	-	755	935	-	-	-	-			
DN80	-	-	-	-	-	955	1026	-	-	-			
DN100	-	-	-	-	-	-	1050	1230	-	-			
DN150	-	-	-	-	-	-	-	1280	1692	-			
DN200	-	-	-	-	-	-	-	-	1722	-			
DN250	-	-	-	-	-	-	-	-	-	2184			
DN300	-	-	-	-	-	-	-	-	-	2210			
ASME 150			ı				'	ı		ı			
1/2"	361	373	530	-	-	-	-	-	-	-			
3/4"	-	-	540	-	-	-	-	-	-	-			
1"	-	-	546	632	-	-	-	-	-	-			
1½"	-	-	-	644	743	-	-	-	-	-			
2"	-	-	-	-	747	926	-	-	-	-			
3"	-	-	-	-	-	939	1010	-	-	-			
4"	-	-	-	-	-	-	1022	1202	-	-			
6"	-	-	-	-	-	-	-	1228	1640	-			
8"	-	-	-	-	-	-	-	-	1666	-			
10"	-	-	-	-	-	-	-	-	-	2074			
12"	-	-	-	-	-	-	-	-	-	2100			

	mm (±5)												
	S08	S10	S15	S25	S50	S80	S100	S150	S200	S250			
ASME 300		I		I	I	I	I	I	I				
1/2"	371	383	540	-	-	-	-	-	-	-			
3/4"	-	-	550	-	-	-	-	-	-	-			
1"	-	-	558	644	-	-	-	-	-	-			
1½"	-	-	-	658	757	-	-	-	-	-			
2"	-	-	-	-	759	939	-	-	-	-			
3"	-	-	-	-	-	957	1028	-	-	-			
4"	-	-	-	-	-	-	1042	1222	-	-			
6"	-	-	-	-	-	-	-	1246	1658	-			
8"	-	-	-	-	-	-	-	-	1686	-			
10"	-	-	-	-	-	-	-	-	-	2106			
12"	-	-	-	-	-	-	-	-	-	2132			
ASME 600		1											
1/2"	383	395	552	-	-	-	-	-	-	-			
3/4"	-	-	562	-	-	-	-	-	-	-			
1"	-	-	572	658	-	-	-	-	-	-			
1½"	-	-	-	674	773	-	-	-	-	-			
2"	-	-	-	-	779	959	-	-	-	-			
3"	-	-	-	-	-	977	1048	-	-	-			
4"	-	-	-	-	-	-	1086	1266	-	-			
6"	-	-	-	-	-	-	-	1298	1710	-			
8"	-	-	-	-	-	-	-	-	1742	-			
10"	-	-	-	-	-	-	-	-	-	2186			
12"	-	-	-	-	-	-	-	-	-	2194			
JIS 10K	'			ı					ı				
50A	-	-	-	-	715	895	-	-	-	-			
80A	-	-	-	-	-	915	986	-	-	-			
100A	-	-	-	-	-	-	1022	1202	-	-			
150A	-	-	-	-	-	-	-	1202	1652	-			
200A	-	-	-	-	-	-	-	-	1666	-			
250A	-	-	-	-	-	-	-	-	-	2106			
300A	-	-	-	-	-	-	-	-	-	2124			
JIS 20K													
10A	341	353	-	-	-	-	-	-	-	-			
15A	341	353	510	-	-	-	-	-	-	-			
25A	-	-	514	600	-	-	-	-	-	-			
40A	-	-	-	610	709	-	-	-	-	-			
50A	-	-	-	-	715	895	-	-	-	-			
80A	-	-	-	-	-	915	986	-	-	-			
100A	-	-	-	-	-	-	1022	1240	-	-			
150A	-	-	-	-	-	-	-	1240	1652	-			

	mm (±5)											
	S08	S10	S15	S25	S50	S80	S100	S150	S200	S250		
200A	-	-	-	-	-	-	-	-	1666	-		
250A	-	-	-	-	-	-	-	-	-	2106		
300A	-	-	-	-	-	-	-	-	-	2124		

	inches (±0.2)												
	S08	S10	S15	S25	S50	S80	S100	S150	S200	S250			
PN16		<u> </u>			ı			<u> </u>	ı	ı			
DN80	-	-	-	-	-	-	38.2	-	-	-			
DN100	-	-	-	-	-	-	39.3	45.4	-	-			
DN150	-	-	-	-	-	-	-	47.2	61.9	-			
DN200	-	-	-	-	-	-	-	-	62.4	-			
DN250	-	-	-	-	-	-	-	-	-	82.7			
DN300	-	-	-	-	-	-	-	-	-	79.8			
PN40		ı		ı		ı		ı					
DN10	13.2	13.7	-	-	-	-	-	-	-	-			
DN15	13.4	13.9	20.1	-	-	-	-	-	-	-			
DN25	-	-	20.2	23.6	-	-	-	-	-	-			
DN40	-	-	-	24	27.9	-	-	-	-	-			
DN50	-	-	-	-	28.1	35.2	-	-	-	-			
DN80	-	-	-	-	-	36	38.8	-	-	-			
DN100	-	-	-	-	-	-	39.4	46.4	-	-			
DN150	-	-	-	-	-	-	-	47.2	63.5	-			
DN200	-	-	-	-	-	-	-	-	64.5	-			
DN250	-	-	-	-	-	-	-	-	-	81.9			
DN300	-	-	-	-	-	-	-	-	-	82.7			
PN63													
DN50	-	-	-	-	29.2	36.3	-	-	-	-			
DN80	-	-	-	-	-	37.1	39.9	-	-	-			
DN100	-	-	-	-	-	-	40.4	47.5	-	-			
DN150	-	-	-	-	-	-	-	48.8	65	-			
DN200	-	-	-	-	-	-	-	-	66.2	-			
DN250	-	-	-	-	-	-	-	-	-	83.5			
DN300	-	-	-	-	-	-	-	-	-	84.6			
PN100													
DN10	14	14.4	-	-	-	-	-	-	-	-			
DN15	14	14.4	20.6	-	-	-	-	-	-	-			
DN25	-	-	21.6	25	-	-	-	-	-	-			
DN40	-	-	-	25.3	29.2	-	-	-	-	-			
DN50	-	-	-	-	29.7	36.8	-	-	-	-			
DN80	-	-	-	-	-	37.6	40.4	-	-	-			

	inches (±0.2)											
	S08	S10	S15	S25	S50	S80	S100	S150	S200	S250		
DN100	-	-	-	-	-	-	41.3	48.4	-	-		
DN150	-	-	-	-	-	-	-	50.4	66.6	-		
DN200	-	-	-	-	-	-	-	-	67.8	-		
DN250	-	-	-	-	-	-	-	-	-	85.9		
DN300	-	-	-	-	-	-	-	-	-	87		
ASME 150												
1/2"	14.2	14.7	20.9	-	-	-	-	-	-	-		
3/4"	-	-	21.2	-	-	-	-	-	-	-		
1"	-	-	21.5	24.9	-	-	-	-	-	-		
1½"	-	-	-	25.3	29.2	-	-	-	-	-		
2"	-	-	-	-	29.4	36.5	-	-	-	-		
3	-	-	-	-	-	37	39.8	-	-	-		
4"	-	-	-	-	-	-	40.2	47.3	-	-		
6"	-	-	-	-	-	-	-	48.3	64.6	-		
8"	-	-	-	-	-	-	-	-	65.6	-		
10"	-	-	-	-	-	-	-	-	-	81.6		
12"	-	-	-	-	-	-	-	-	-	82.7		
ASME 300												
1/2"	14.6	15.1	21.2	-	-	-	-	-	-	-		
3/4"	-	-	21.6	-	-	-	-	-	-	-		
1"	-	-	22	25.3	-	-	-	-	-	-		
1½"	-	-	-	25.9	29.8	-	-	-	-	-		
2"	-	-	-	-	30	37	-	-	-	-		
3"	-	-	-	-	-	37.7	40.5	-	-	-		
4"	-	-	-	-	-	-	41	48.1	-	-		
6"	-	-	-	-	-	-	-	49	65.3	-		
8"	-	-	-	-	-	-	-	-	66.4	-		
10"	-	-	-	-	-	-	-	-	-	82.9		
12"	-	-	-	-	-	-	-	-	-	83.9		
ASME 600												
1/2"	15.1	15.5	21.7	-	-	-	-	-	-	-		
3/4"	-	-	22.1	-	-	-	-	-	-	-		
1"	-	-	22.5	25.9	-	-	-	-	-	-		
1½"	-	-	-	26.5	30.4	-	-	-	-	-		
2"	-	-	-	-	30.7	37.7	-	-	-	-		
3	-	-	-	-	-	38.5	41.2	-	-	-		
4"	-	-	-	-	-	-	42.8	49.8	-	-		
6"	-	-	-	-	-	-	-	51.1	67.3	-		
8"	-	-	-	-	-	-	-	-	68.6	-		
10"	-	-	-	-	-	-	-	-	-	86		
12"	-	-	-	-	-	-	-	-	-	86.4		

	inches (±0.2)												
	S08	S10	S15	S25	S50	S80	S100	S150	S200	S250			
JIS 10K				ı	ı			ı					
50A	-	-	-	-	28.2	35.2	-	-	-	-			
80A	-	-	-	-	-	36	38.8	-	-	-			
100A	-	-	-	-	-	-	40.2	47.3	-	-			
150A	-	-	-	-	-	-	-	47.3	65	-			
200A	-	-	-	-	-	-	-	-	65.5	-			
250A	-	-	-	-	-	-	-	-	-	82.9			
300A	-	-	-	-	-	-	-	-	-	83.6			
JIS 20K													
10A	13.4	13.9	-	-	-	-	-	-	-	-			
15A	13.4	13.9	20	-	-	-	-	-	-	-			
25A	-	-	20.2	23.6	-	-	-	-	-	-			
40A	-	-	-	24	27.9	-	-	-	-	-			
50A	-	-	-	-	28.2	35.2	-	-	-	-			
80A	-	-	-	-	-	36	38.8	-	-	-			
100A	-	-	-	-	-	-	40.2	48.8	-	-			
150A	-	-	-	-	-	-	-	48.8	65	-			
200A	-	-	-	-	-	-	-	-	62.6	-			
250A	-	-	-	-	-	-	-	-	-	82.9			
300A	-	-	-	-	-	-	-	-	-	83.6			

Dimension B for meters with Hastelloy $\! \mathbb{R}$ and Stainless Steel (UNS S31803) measuring tubes

	mm											
	H08	H10	H15	H25	H50	H80	D100	D150	D200			
PN40												
DN15	328	353	-	-	-	-	-	-	-			
DN25	-	-	510	-	-	-	-	-	-			
DN40	-	-	-	600	-	-	-	-	-			
DN50	-	-	-	-	715	-	-	-	-			
DN80	-	-	-	-	-	915	-	-	-			
PN63												
DN50	-	-	-	-	715	-	-	-	-			
DN80	-	-	-	-	-	915	-	-	-			
PN100												
DN15	328	353	-	-	-	-	-	-	-			
DN25	-	-	510	-	-	-	-	-	-			
DN40	-	-	-	600	-	-	-	-	-			
DN50	-	-	-	-	715	-	-	-	-			
DN80	-	-	-	-	-	915	-	-	-			

	mm											
	H08	H10	H15	H25	H50	H80	D100	D150	D200			
PN160	ı		1	1	1			1	1			
DN15	328	353	-	-	-	-	-	-	-			
DN25	-	-	510	-	-	-	-	-	-			
DN40	-	-	-	600	-	-	-	-	-			
DN50	-	-	-	-	715	-	-	-	-			
DN80	-	-	-	-	-	915	1042	-	-			
DN100	-	-	-	-	-	-	1070	1250	-			
DN150	-	-	-	-	-	-	-	1306	1718			
DN200	-	-	-	-	-	-	-	-	1742			
ASME 150												
1/2"	328	353	-	-	-	-	-	-	-			
1"	-	-	510	-	-	-	-	-	-			
1½"	-	-	-	600	-	-	-	-	-			
2"	-	-	-	-	715	-	-	-	-			
3"	-	-	-	-	-	915	-	-	-			
ASME 300												
1/2"	328	353	-	-	-	-	-	-	-			
1"	-	-	510	-	-	-	-	-	-			
1½"	-	-	-	600	-	-	-	-	-			
2"	-	-	-	-	715	-	-	-	-			
3"	-	-	-	-	-	915	-	-	-			
ASME 600		·							<u> </u>			
1/2"	328	353	-	-	-	-	-	-	-			
1"	-	-	510	-	-	-	-	-	-			
1½"	-	-	-	600	-	-	-	-	-			
2"	-	-	-	-	715	-	-	-	-			
3"	-	-	-	-	-	915	-	-	-			
ASME 900												
1½"	-	-	-	600	-	-	-	-	-			
2"	-	-	-	-	715	-	-	-	-			
3"	-	-	-	-	-	915	1086	-	-			
4"	-	-	-	-	-	-	1112	1292	-			
6"	-	-	-	-	-	-	-	1342	1754			
8"	-	-	-	-	-	-	-	-	1798			
ASME 1500												
1/2"	328	353	-	-	-	-	-	-	-			
1"	-	-	510	-	-	-	-	-	-			
1½"	-	-	-	600	-	-	-	-	-			
2"	-	-	-	-	715	-	-	-	-			
3"	-	-	-	-	-	915	1118	-	-			
4"	-	-	-	-	-	-	1130	1310	-			

	mm												
	H08	H10	H15	H25	H50	H80	D100	D150	D200				
6"	-	-	-	-	-	-	-	1406	1818				
8"	-	-	-	-	-	-	-	-	1900				
JIS 10K													
50A	-	-	-	-	715	-	-	-	-				
80A	-	-	-	-	-	915	-	-	-				
JIS 20K													
15A	328	353	-	-	-	-	-	-	-				
25A	-	-	510	-	-	-	-	-	-				
40A	-	-	-	600	-	-	-	-	-				
50A	-	-	-	-	715	-	-	-	-				
80A	-	-	-	-	-	915	-	-	-				

	inches											
	H08	H10	H15	H25	H50	H80	D100	D150	D200			
PN40	_	·	<u>'</u>	<u>'</u>	_	_		_	_			
DN15	12.9	13.9	-	-	-	-	-	-	-			
DN25	-	-	20.1	-	-	-	-	-	-			
DN40	-	-	-	23.6	-	-	-	-	-			
DN50	-	-	-	-	28.1	-	-	-	-			
DN80	-	-	-	-	-	36	-	-	-			
PN63												
DN50	-	-	-	-	28.1	-	-	-	-			
DN80	-	-	-	-	-	36	-	-	-			
PN100												
DN15	12.9	13.9	-	-	-	-	-	-	-			
DN25	-	-	20.1	-	-	-	-	-	-			
DN40	-	-	-	23.6	-	-	-	-	-			
DN50	-	-	-	-	28.1	-	-	-	-			
DN80	-	-	-	-	-	36	-	-	-			
PN160												
DN15	12.9	13.9	-	-	-	-	-	-	-			
DN25	-	-	20.1	-	-	-	-	-	-			
DN40	-	-	-	23.6	-	-	-	-	-			
DN50	-	-	-	-	28.1	-	-	-	-			
DN80	-	-	-	-	-	36	41	-	-			
DN100	-	-	-	-	-	-	42.1	49.2	-			
DN150	-	-	-	-	-	-	-	51.4	67.6			
DN200	-	-	-	-	-	-	-	-	68.6			

	inches											
	H08	H10	H15	H25	H50	H80	D100	D150	D200			
ASME 150		<u> </u>										
1/2"	12.9	13.9	-	-	-	-	-	-	-			
1"	-	-	20.1	-	-	-	-	-	-			
1½"	-	-	-	23.6	-	-	-	-	-			
2"	-	-	-	-	28.1	-	-	-	-			
3"	-	-	-	-	-	36	-	-	-			
ASME 300												
1/2"	12.9	13.9	-	-	-	-	-	-	-			
1"	-	-	20.1	-	-	-	-	-	-			
1½"	-	-	-	23.6	-	-	-	-	-			
2"	-	-	-	-	28.1	-	-	-	-			
3"	-	-	-	-	-	36	-	-	-			
ASME 600												
1/2"	12.9	13.9	-	-	-	-	-	-	-			
1"	-	-	20.1	-	-	-	-	-	-			
1½"	-	-	-	23.6	-	-	-	-	-			
2"	-	-	-	-	28.1	-	-	-	-			
3"	-	-	-	-	-	36	-	-	-			
ASME 900												
1½"	-	-	-	23.6	-	-	-	-	-			
2"	-	-	-	-	28.1	-	-	-	-			
3"	-	-	-	-	-	36	42.7	-	-			
4"	-	-	-	-	-	-	43.7	50.9	-			
6"	-	-	-	-	-	-	-	52.7	69			
8"	-	-	-	-	-	-	-	-	70.8			
ASME 1500)											
1/2"	12.9	13.9	-	-	-	-	-	-	-			
1"	-	-	20.1	-	-	-	-	-	-			
1½"	-	-	-	23.6	-	-	-	-	-			
2"	-	-	-	-	28.1	-	-	-	-			
3"	-	-	-	-	-	36	44	-	-			
4"	-	-	-	-	-	-	44.5	51.6	-			
6"	-	-	-	-	-	-	-	55.3	71.6			
8"	-	-	-	-	-	-	-	-	74.8			
JIS 10K												
50A	-	-	-	-	28.1	-	-	-	-			
80A	-	-	-	-	-	36	-	-	-			

	inches												
	H08	H10	H15	H25	H50	H80	D100	D150	D200				
JIS 20K													
15A	12.9	13.9	-	-	-	-	-	-	-				
25A	-	-	20.1	-	-	-	-	-	-				
40A	-	-	-	23.6	-	-	-	-	-				
50A	-	-	-	-	28.1	-	-	-	-				
80A	-	-	-	-	-	36	-	-	-				


6.5.2 NAMUR dimensions

The following face to face dimensions comply with NAMUR NE132 $\,$

	mm (±3)												
	S15	S25	S50	S80	S100	S150	S250						
PN10													
DN250	-	-	-	-	-	-	2100						
PN16													
DN100	-	-	-	-	1000	-	-						
DN150	-	-	-	-	-	1200	-						
DN200	-	-	-	-	-	-	2100						
PN40													
DN 15	510	-	-	-	-	-	-						
DN 25	-	600	-	-	-	-	-						
DN 50	-	-	715	-	-	-	-						
DN 80	-	-	-	915	-	-	-						

	inches (±0.12)												
	S15	S25	S50	S80	S100	S150	S250						
PN10													
DN250	-	-	-	-	-	-	82.7						
PN16													
DN100	-	-	-	-	39.4	-	-						
DN150	-	-	-	-	-	47.2	-						
DN200	-	-	-	-	-	-	82.7						
PN40													
DN 15	20.1	-	-	-	-	-	-						
DN 25	-	23.6	-	-	-	-	-						
DN 50	-	-	28.1	-	-	-	-						
DN 80	-	-	-	36	-	-	-						

6.5.3 Hygienic versions

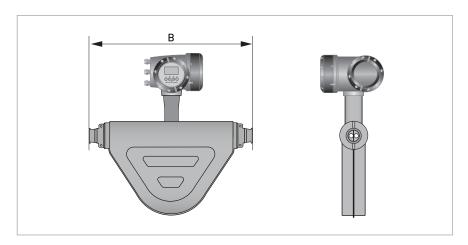

Dimension B for meters with Stainless Steel measuring tubes


			mm	n (±5)	±5) S25 S50 S80								
	S08	S10	S15	S25	S50	S80							
Tri-clover		<u>'</u>		_		1							
1/2"	308	320	-	-	-	-							
1"	-	-	477	-	-	-							
1½"	-	-	-	563	-	-							
2"	-	-	-	-	662	-							
3"	-	-	-	-	-	842							
Tri-clamp DI	N 32676												
DN15	301	313	-	-	-	-							
DN25	-	-	477	-	-	-							
DN40	-	-	-	563	-	-							
DN50	-	-	-	-	662	-							
DN80	-	-	-	-	-	855							
Tri-clamp ISC	2852												
1"	-	-	483	-	-	-							
1½"	-	-	-	569	-	-							
2"	-	-	-	-	668	-							
3"	-	-	-	-	-	848							
DIN 11864-2	Form A (female)												
DN15	345	357	-	-	-	-							
DN25	-	-	514	-	-	-							
DN40	-	-	-	610	-	-							
DN50	-	-	-	-	709	-							
DN80	-	-	-	-	-	915							
Male thread [DIN 11851												
DN15	307	319	-	-	-	-							
DN25	-	-	492	-	-	-							

			mm	(±5)		
	S08	S10	S15	S25	S50	S80
DN40	-	-	-	586	-	-
DN50	-	-	-	-	689	-
DN80	-	-	-	-	-	889
Male thread SM	IS					
1"	-	-	464	-	-	-
1½"	-	-	-	566	-	-
2"	-	-	-	-	665	-
3"	-	-	-	-	-	847

			inche	s (±0.2)		
	S08	S10	S15	S25	S50	S80
Tri-clover						
1/2"	12.1	12.6	-	-	-	-
1"	-	-	18.8	-	-	-
1½"	-	-	-	22.2	-	-
2"	-	-	-	-	26	-
3	-	-	-	-	-	33.1
Tri-clamp DIN 3	32676					
DN15	11.8	12.3	-	-	-	-
DN25	-	-	18.8	-	-	-
DN40	-	-	-	22.2	-	-
DN50	-	-	-	-	26	-
DN80	-	-	-	-	-	33.7
Tri-clamp ISO 2	852					
1"	-	-	19	-	-	-
1½"	-	-	-	22.4	-	-
2"	-	-	-	-	26.3	-
3"	-	-	-	-	-	33.4
DIN 11864-2 Fo	rm A (female)					
DN15	13.6	14	-	-	-	-
DN25	-	-	20.2	-	-	-
DN40	-	-	-	24	-	-
DN50	-	-	-	-	27.9	-
DN80	-	-	-	-	-	36
Male thread DIN	N 11851					
DN15	12	12.5	-	-	-	-
DN25	-	-	19.4	-	-	-
DN40	-	-	-	23	-	-
DN50	-	-	-	-	27.1	-
DN80	-	-	-	-	-	35

			inche	s (±0.2)		
	S08	S10	S15	S80		
Male thread SMS	5					
1"	-	-	18.3	-	-	-
1½"	-	-	-	22.3	-	-
2"	-	-	-	-	26.2	-
3	-	-	-	-	-	33.3

6.5.4 Heating jacket version

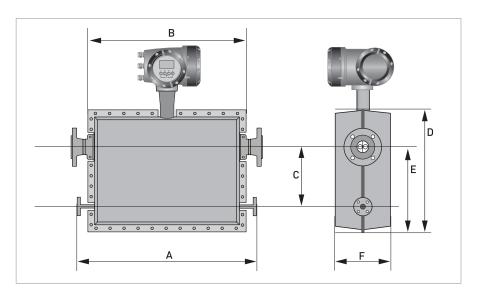


General dimensions

					m	ım				
	S08	S10	S15	S25	S50	S80	S100	S150	S200	S250
	Heating connection size: PN40 DN15 or ASME 150 ½"									
A ±5.0	43	35	590	692	715	891	956	1139	TBA	TBA
B ±3.0	28	33	440	542	565	741	806	989	TBA	TBA
C ±3.0	10	00	130	210	230	320	340	450	TBA	TBA
D ±3.0	31	15	344	453	499	622	682	844	TBA	TBA
E ±3.0	19	78	221	316	356	451	486	617	TBA	TBA
F ±3.0	23	32	226	254	266	322	372	428	TBA	TBA

					inc	hes				
	S08	S10	S15	S25	S50	S80	S100	S150	S200	S250
Heating connection size: PN40 DN15 or ASME 150 1/2"										
A ±0.2	17	7.1	23.2	27.2	28.1	35.1	37.6	44.8	TBA	TBA
B ±0.12	11	.1	17.3	21.3	22.2	29.2	31.7	38.9	TBA	TBA
C ±0.12	3.	.9	5.1	8.3	9	12.6	13.4	17.7	TBA	TBA
D ±0.12	12	2.4	13.5	17.8	19.6	24.5	26.8	33.2	TBA	TBA
E ±0.12	7.	.8	8.7	12.4	14	17.7	19.1	24.3	TBA	TBA
F ±0.12	9.	.1	8.9	10	10.5	12.7	14.6	16.8	TBA	TBA

6.5.5 Purge port option

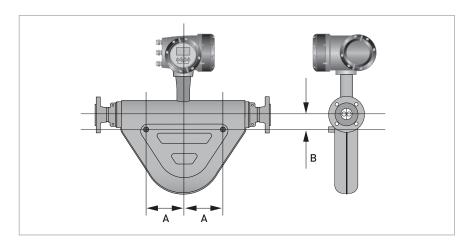

Dimensions

		mm										
	S08	S10	S15	S25	S50	S80	S100	S150	S200	S250		
А	70	70		145	150	205	220	345	600	800		
В	32	2	45	57	60	85		100	160	140		

		inches										
	S08	S10	S15	S25	S50	S80	S100	S150	S200	S250		
А	2.	2.7		5.7	5.9	8.1	8.7	13.6	23.6	31.5		
В	1.3		1.8	2.2	2.4	3.3		3.9	6.3	5.5		

6.5.6 Burst discs

If the meter has been ordered with a burst disc, it will be supplied with the disc fitted. The failure pressure of the disc is 10 barg at $+20^{\circ}$ C / 145 psig at $+68^{\circ}$ F.



CAUTION!

The fitted burst disc will be suitable for the flow rates and process conditions specified on the original order. If the process conditions alter in any way, it is recommended that you contact the manufacturer for advice regarding suitability.


If the process product is hazardous (in any way) it is recommended that an exhaust tube is connected to the NPT male thread of the burst disc and the pipe routed so that the process product can be discharged to a safe area. Use a tube with a diameter large enough AND routed in such a way, so that pressure cannot build up in the meter case.



INFORMATION!

For gas applications, the burst disc must be specified at the time of ordering.


6.5.7 Burst disc option

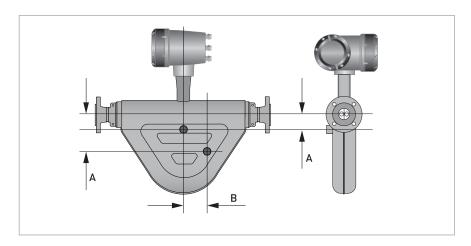


Dimensions

		mm										
	S08	S10	S15	S25	S50	S80	S100	S150	S200	S250		
А	76		92	135	57	74		175	160	220		
В	38	.5	62	0	0	0		0	0	60		

		inches										
	S08	S10	S15	S25	S50	S80	S100	S150	S200	S250		
Α	3.0		3.6	5.3	2.2	2.9		6.9	6.3	8.7		
В	1.5	52	2.4	0	0	0		0	0	2.4		

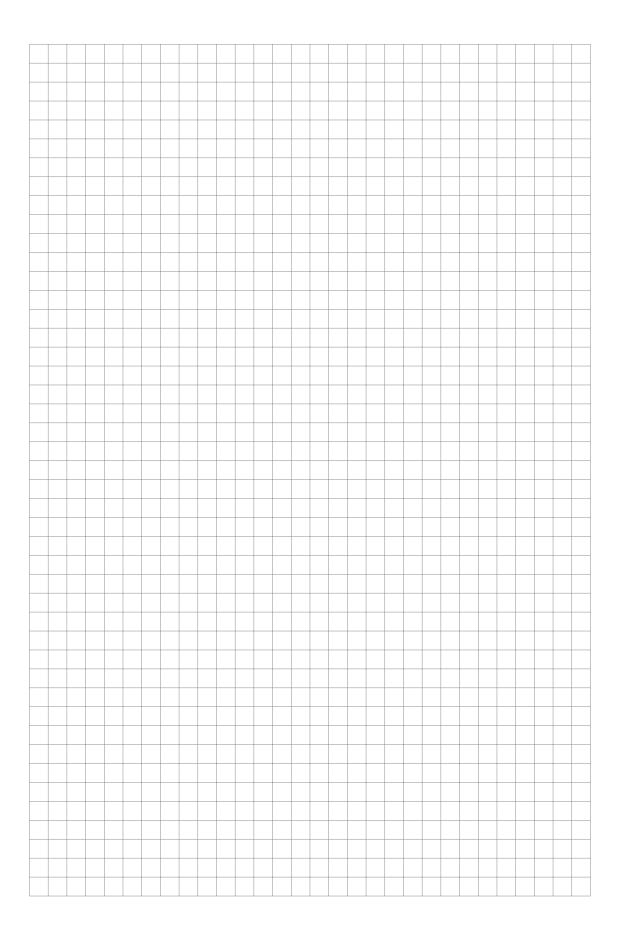

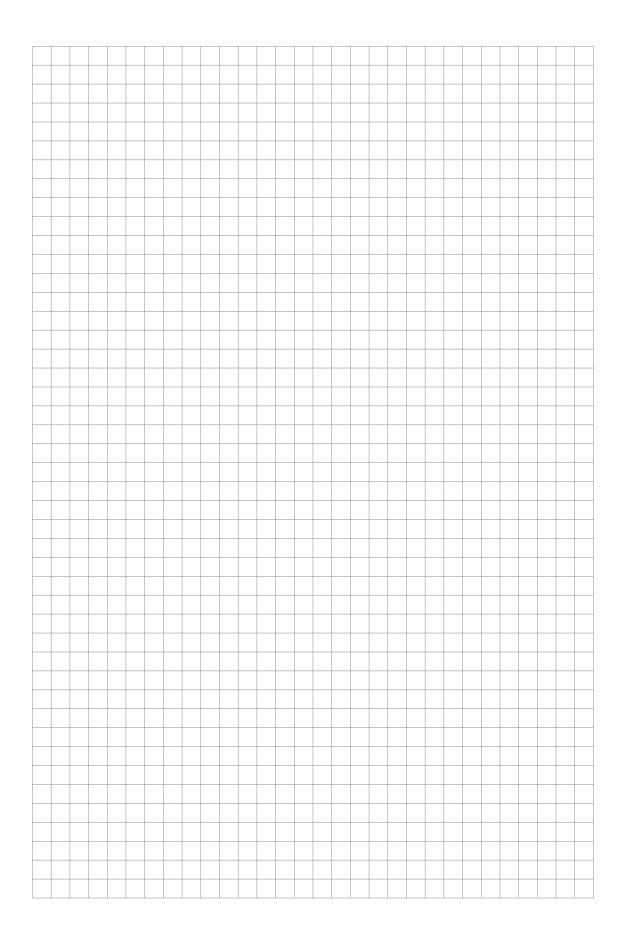



KROHNE – Process instrumentation and measurement solutions

- Flow
- Level
- Temperature
- Pressure
- Process Analysis
- Services

Head Office KROHNE Messtechnik GmbH Ludwig-Krohne-Str. 5 47058 Duisburg (Germany) Tel.: +49 203 301 0

Fax: +49 203 301 10389 info@krohne.com

The current list of all KROHNE contacts and addresses can be found at: www.krohne.com

